




Temperature Control

- The Up / Down keys allow you to adjust the set temperature ^ V
- When you press either key, you will see the word SET and the desired temperature value. Use the Up / Down keys to adjust the SET value ^ V
- Press Tick to confirm settings and return to the main display ✓

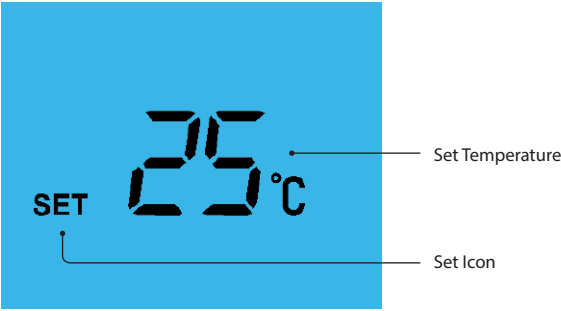

Note: This new temperature is maintained only until the next programmed comfort level. At this time, the thermostat will revert back to the programmed levels.




Temperature Hold

The temperature hold function allows you to manually override the current operating program and set a different temperature for a desired period.

- Use the Left / Right keys to scroll to HOLD < >
- Press Tick to confirm selection ✓
- Use the Up / Down keys to set the desired Hold period ^ V
- Press Tick to confirm selection ✓
- Use the Up / Down keys to set the desired Hold temperature ^ V
- Press Tick to confirm selection ✓

You will see the HOLD LEFT indication is displayed on screen. The time will countdown the set duration and then revert to the normal program.

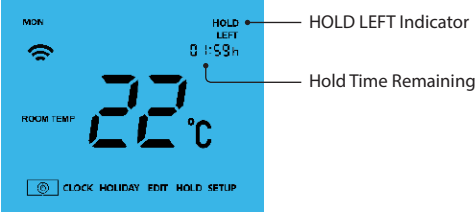

To cancel a temperature Hold, repeat these steps but reduce the Hold time to 00:00 hrs