

Television & Entertainment

The television should normally be left powered on in standby so the remote controls can operate it.

If there is no power

- Find the five buttons behind the bottom right-hand corner of the TV.
- Press the bottom button to switch the main power on.
- Leave the main power on and use standby for normal operation.

Normal television

On the Panasonic remote, press the **TV** input button at the top right.

Amazon Fire TV

- Press **AV** on the Panasonic remote.
- Select **HDMI 3**.
- Use the Amazon Fire remote for channels, Netflix and available apps.
- Use voice control to search.
- The Fire remote power button should turn the TV on and off.

If the picture is blank, check HDMI 3. Please sign out of personal accounts before leaving.